


Electrical Wiring Schematic for Tow Behind Trailers with ABS Brakes

Color	Function	Gauge
White	Ground	8
Green	Right Turn	14
Yellow	Left Turn	14
Brown	Tail Lights	14
Red	Stop, ABS	10
Black	un-used	10
Blue	Charging, ABS	10

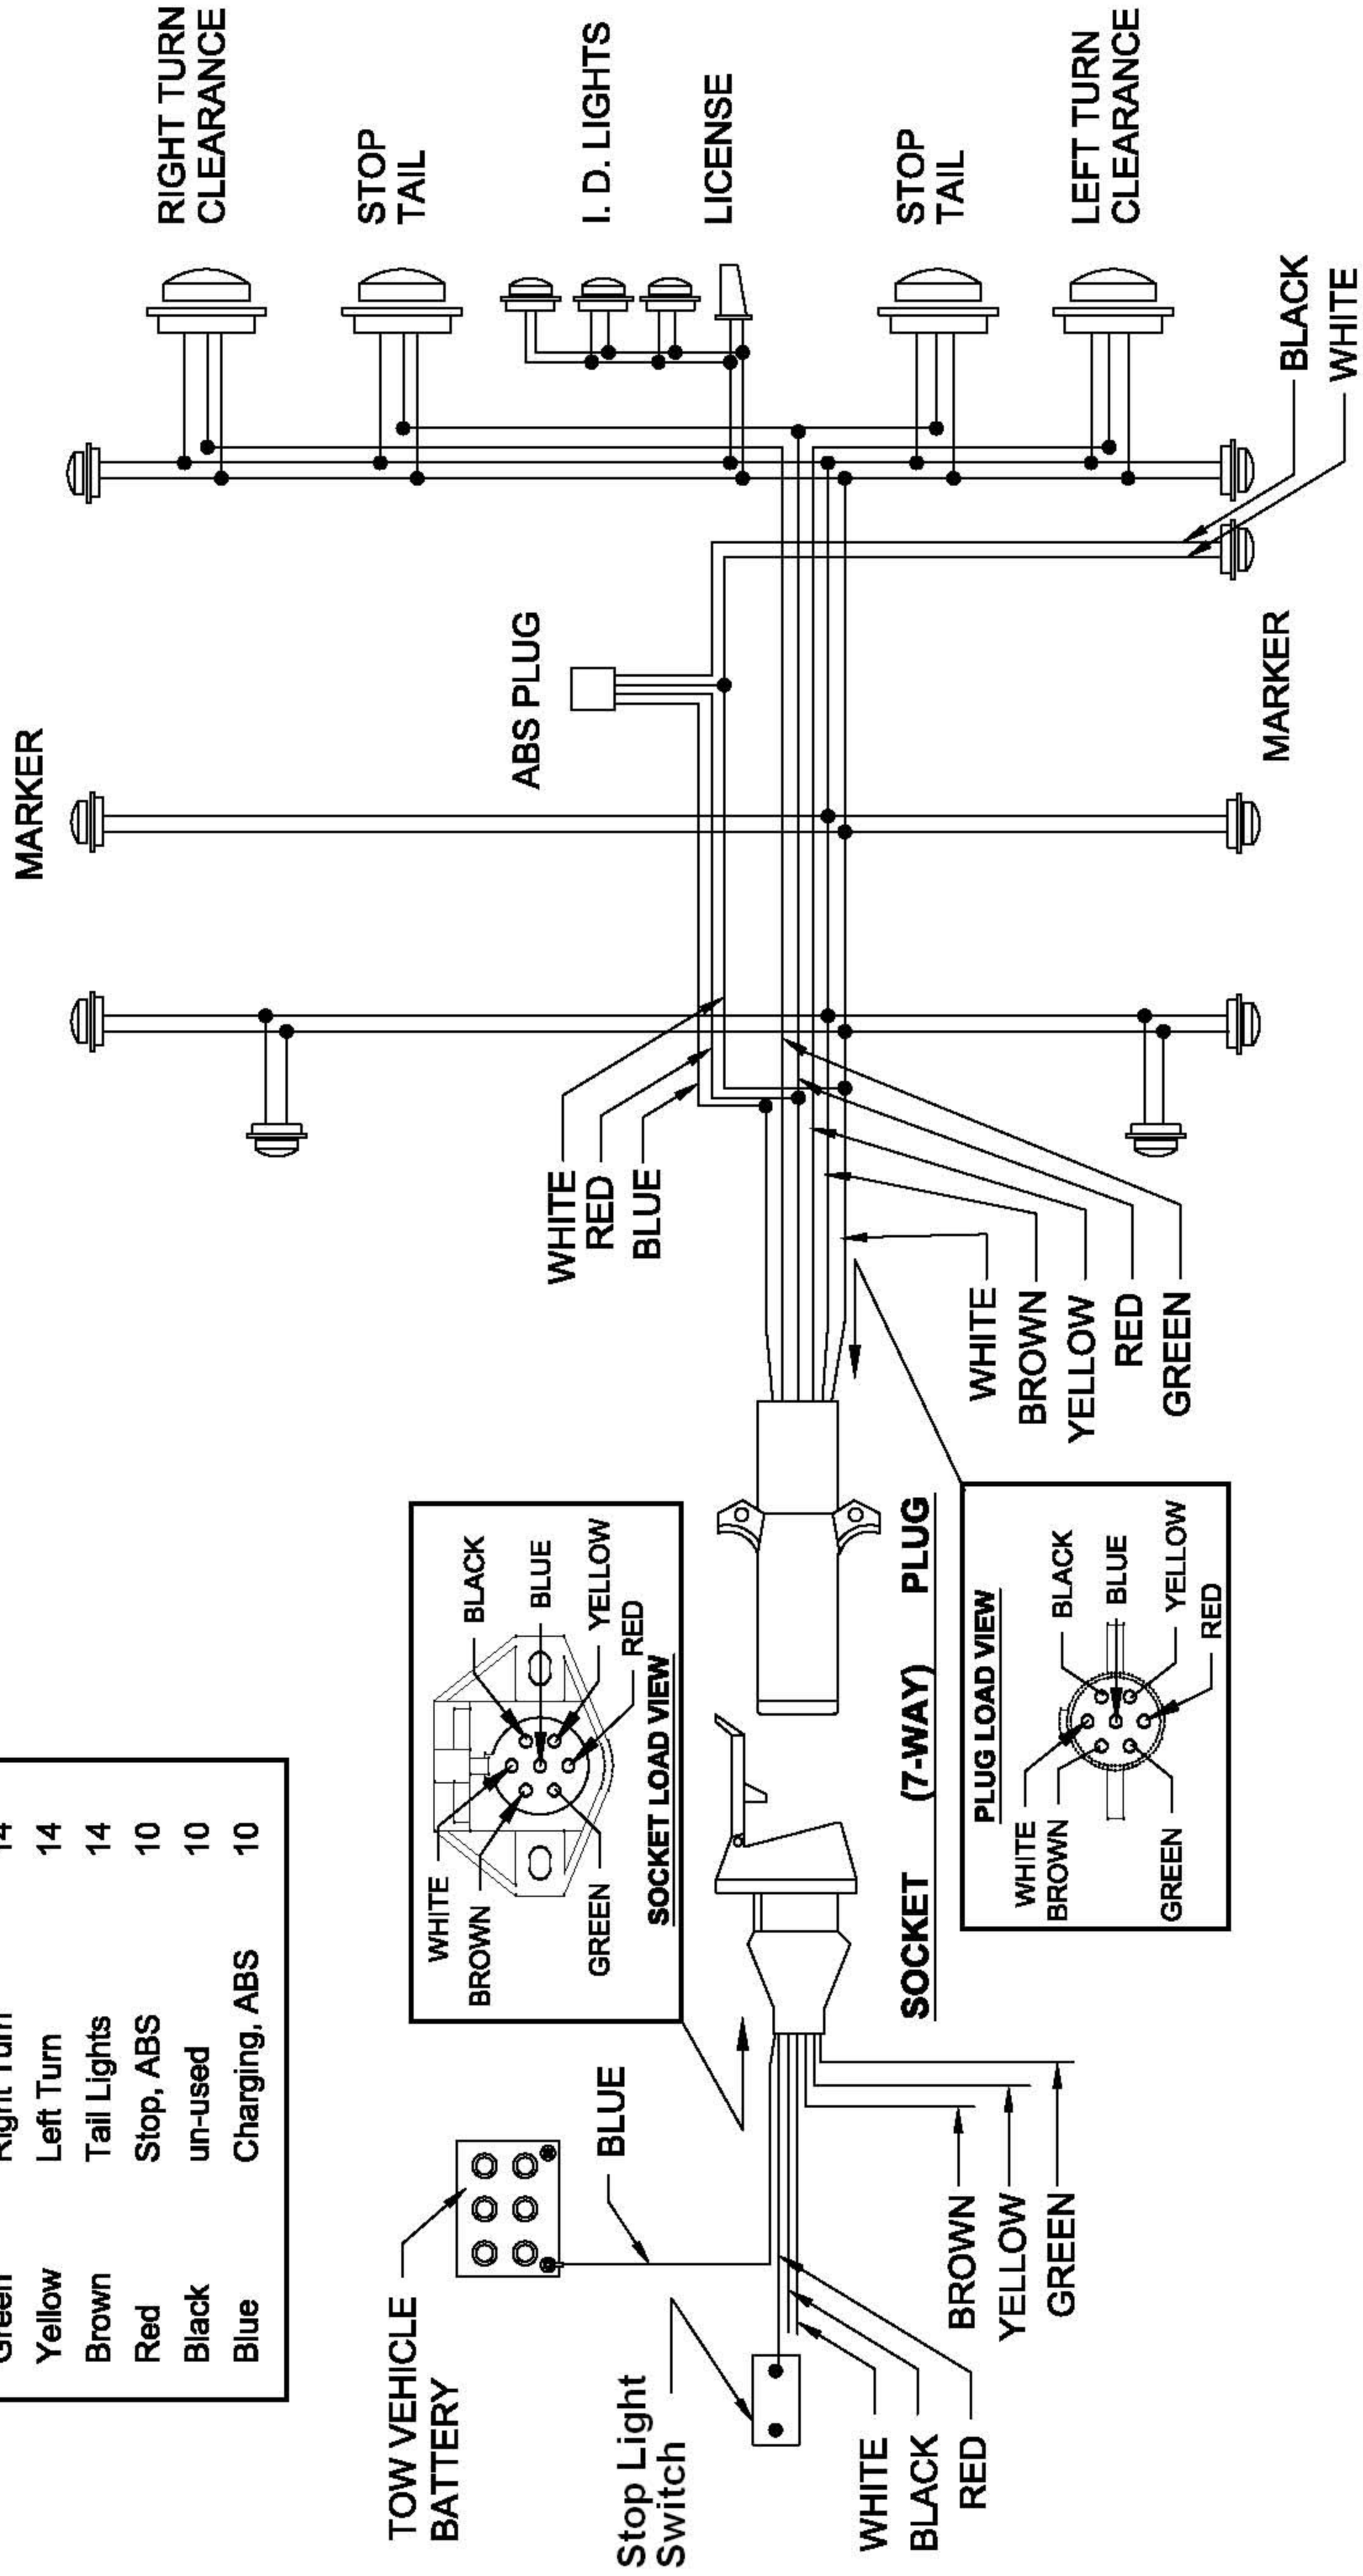

Notes: The Black wire is **NOT** used on trailers with ABS air brakes.
 The White ground wire on the truck should be a good solid ground.
 The Blue ABS wire on the truck **should** be keyed to the ignition and fused, 20-amp.
 The Red stop light wire on the truck should be connected to the stop light switch.